


# Fine Grinding Machine

Beads mill without clogging  
by beads separator setting variable slit

## Apex Mill

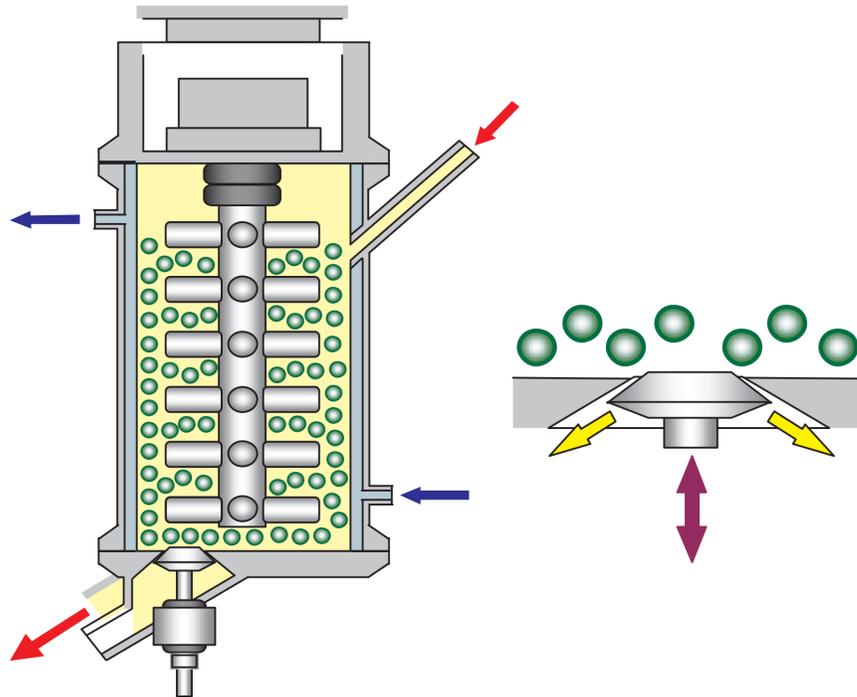

Small beads  
separated from  
product with this  
device employing  
centrifugal force

## Summary

Apex Mill has realized fine grinding and mixing of materials effectively and stably due to developing a variable slit for beads separation.

Available beads size is between 0.5mm-3mm.

Material slurry is fed from upper section of mill, and it fall down with a plug flow inside the mill.

When slurry get to the bottom of the mill, product slurry is discharged through the separation of variable screen.

## Features

- Effective fine grinding and mixing
- New beads separation method employing the variable slit.
- No need pre-mixing

## Application

Chemical, Electric, Metal, Electric parts, Cosmetic, Ceramics, Ink, Organic pigment, Medicine